



Red Hat Enterprise Linux Release 9.2 Manual Pages on 'nvme-wdc-cloud-boot-SSD-version.1' command

\$ man nvme-wdc-cloud-boot-SSD-version.1

NVME-WDC-CLOUD-BO(1) NVMe Manual NVME-WDC-CLOUD-BO(1)

NAME

nvme-wdc-cloud-boot-SSD-version - Display WDC plugin Cloud Boot SSD

Version

SYNOPSIS

nvme wdc cloud-boot-SSD-version <device>

DESCRIPTION

For the NVMe device given, this command displays the current Cloud
Hyperscale Boot Version (if supported by the device).

The <device> parameter is mandatory NVMe character device (ex:
/dev/nvme0).

On success it returns 0, error code otherwise.

EXAMPLES

? Displays the cloud boot ssd version for the device:

```
# nvme wdc cloud-boot-SSD-version /dev/nvme0
```

NVME

Part of the nvme-user suite.

NVMe 06/23/2023 NVME-WDC-CLOUD-BO(1)