



## **Red Hat Enterprise Linux Release 9.2 Manual Pages on 'nvme-wdc-get-pfail-dump.1' command**

**\$ man nvme-wdc-get-pfail-dump.1**

NVME-WDC-GET-PFAI(1)      NVMe Manual      NVME-WDC-GET-PFAI(1)

### NAME

nvme-wdc-get-pfail-dump - Retrieve WDC device's pfail crash dump.

### SYNOPSIS

nvme wdc get-pfail-dump <device> [--output-file=<FILE>, -o <FILE>]

### DESCRIPTION

For the NVMe device given, sends the WDC vendor unique pfail crash dump request and saves the result to file. In current implementation pfail crash dump is captured if it is present. On success it will save the dump in file with appropriate suffix. Note that this command will clear the available dump from the device on success.

The <device> parameter is mandatory NVMe character device (ex: /dev/nvme0).

This will only work on WDC devices supporting this feature. Results for any other device are undefined.

### OPTIONS

-o <FILE>, --output-file=<FILE>

Output file; defaults to device serial number followed by "pfail\_dump" suffix

### EXAMPLES

? Gets the pfail crash dump from the device and saves to default file in current directory (e.g. STM00019F3F9\_pfail\_dump.bin):

```
# nvme wdc get-pfail-dump /dev/nvme0
```

? Gets the pfail crash dump from the device and saves to defined file  
in current directory (e.g. testSTM00019F3F9\_pfail\_dump.bin):

```
# nvme wdc get-pfail-dump /dev/nvme0 -o test
```

? Gets the pfail crash dump from the device and saves to defined file  
with pathname (e.g. /tmp/testSTM00019F3F9\_pfail\_dump.bin):

```
# nvme wdc get-pfail-dump /dev/nvme0 -o /tmp/test
```

## NVME

Part of the nvme-user suite

NVMe	06/23/2023	NVME-WDC-GET-PFAI(1)
------	------------	----------------------