



Full credit is given to the above companies including the OS that this PDF file was generated!

Rocky Enterprise Linux 9.2 Manual Pages on command 'iscsiuio.8'

\$ man iscsiuiio.8

iscsiuio(8) System Manager's Manual iscsiuiio(8)

NAME

iscsiuio - iSCSI UserSpace I/O driver

SYNOPSIS

iscsiuio [-d-f-v]

DESCRIPTION

iscsiuio is the UserSpace I/O driver for the QLogic NetXtreme II BCM5706/5708/5709 series PCI/PCI-X Gigabit Ethernet Network Interface Card (NIC) and for the QLogic NetXtreme II BCM57710/57711/57712/57800/57810/57840 series PCI-E 10 Gigabit Ethernet Network Interface Card. The driver has been tested on 2.6.28 kernels and above.

Refer to the README.TXT from the driver package on how to compile and install the driver.

Refer to various Linux documentations on how to configure network protocol and address.

DRIVER DEPENDENCIES

PARAMETERS

There are very few parameters when running this application.

`-d|--debug<debuglevel>`

This is to enable debug mode where debug messages will be sent to stdout. The following debug modes are supported:

DEBUG 4 - Print all messages

INFO 3 - Print messages needed to follow the uIP code
(default)

WARN 2 - Print warning messages

ERROR 1 - Only print critical errors

`-f|--foreground`

This is to enable foreground mode so that this application doesn't get sent into the background.

`-v|--version`

This is to print the version.

`-p|--pid<pidfile>`

Use pidfile (default `/run/iscsiuio.pid`)

`-h|--help`

Display this help and exit.

AUTHOR

Benjamin Li - benli@broadcom.com

Eddie Wai - eddie.wai@broadcom.com

Maintained by

QLogic-Storage-Upstream@qlogic.com

QLogic Corporation

12/10/2013

iscsiuio(8)