



Rocky Enterprise Linux 9.2 Manual Pages on command 'nvme-detach-ns.1'

\$ man nvme-detach-ns.1

NVME-DETACH-NS(1) NVMe Manual NVME-DETACH-NS(1)

NAME

nvme-detach-ns - Send NVMe detach namespace, return result.

SYNOPSIS

```
nvme detach-ns <device> [--namespace-id=<nsid> | -n <nsid>]
                        [--controllers=<ctrl-list,> | -c <ctrl-list,>]
```

DESCRIPTION

For the NVMe device given, sends the nvme namespace detach command for the provided namespace identifier, attaching to the provided list of controller identifiers.

OPTIONS

-n <nsid>, --namespace-id=<nsid>

The namespace identifier to detach.

-c <ctrl-list,>, --controllers=<ctrl-list,>

The comma separated list of controller identifiers to detach the namespace from.

EXAMPLES

No examples yet.

NVME

Part of the nvme-user suite

NVMe	06/23/2023	NVME-DETACH-NS(1)
------	------------	-------------------