



Rocky Enterprise Linux 9.2 Manual Pages on command 'nvme-ocp-latency-monitor-log.1'

\$ man nvme-ocp-latency-monitor-log.1

NVME-OCp-LATENCY-(1) NVMe Manual NVME-OCp-LATENCY-(1)

NAME

nvme-ocp-latency-monitor-log - Display latency monitor log page data in human readable format

SYNOPSIS

nvme ocp latency-monitor-log <device> [--output-format=<fmt> | -o <fmt>]

DESCRIPTION

For the NVMe device given, latency monitor log page data.

The <device> parameter is mandatory and may be either the NVMe character device (ex: /dev/nvme0) or block device (ex: /dev/nvme0n1).

This will only work on OCP compliant devices supporting this log page.

Results for any other device are undefined.

On success it returns 0, error code otherwise.

OPTIONS

-o <format>, --output-format=<format>

Set the reporting format to normal or json. Only one output format can be used at a time. The default is normal.

EXAMPLES

? Displays the get latency monitor log for the device:

```
# nvme ocp latency-monitor-log /dev/nvme0
```

NVME

Part of the nvme-user suite.

NVMe	06/23/2023	NVME-OCP-LATENCY-(1)
------	------------	----------------------