



Rocky Enterprise Linux 9.2 Manual Pages on command 'nvme-seagate-help.1'

\$ man nvme-seagate-help.1

NVME-SEAGATE-HELP(1) NVMe Manual NVME-SEAGATE-HELP(1)

NAME

nvme-seagate-help - Shows the Seagate plugin's help information

SYNOPSIS

nvme seagate help

DESCRIPTION

Provides the help information for the Seagate plugin.

OPTIONS

No Options

EXAMPLES

Get help information for specific seagate sub-commands.

Seagate vendor specific extensions

The following are all implemented sub-commands:

vs-temperature-stats	Retrieve Seagate temperature statistics
vs-log-page-sup	Retrieve Seagate Supported Log-pages Information
vs-smart-add-log	Retrieve Seagate extended-SMART Information
vs-pcie-stats	Retrieve Seagate PCIe error statistics
clear-pcie-correctable-errors	Clear Seagate PCIe error statistics

get-host-tele	Retrieve Seagate Host-Initiated Telemetry
get-ctrl-tele	Retrieve Seagate Controller-Initiated Telemetry
vs-internal-log	Retrieve Seagate Controller-Initiated Telemetry in binary format
plugin-version	Shows Seagate plugin's version information
version	Shows the program version
help	Display this help

See nvme seagate help <command> for more information on a specific command

nvme seagate help

NVME

Part of the nvme-user suite

NVMe 06/23/2023 NVME-SEAGATE-HELP(1)