



## ***Rocky Enterprise Linux 9.2 Manual Pages on command 'nvme-transcend-badblock.1'***

**\$ man nvme-transcend-badblock.1**

NVME-TRANSCEND-BAD(1)      NVMe Manual      NVME-TRANSCEND-BAD(1)

### NAME

nvme-transcend-badblock - Retrieve Transcend NVMe device's bad blocks.

### SYNOPSIS

nvme transcend badblock <device>

### DESCRIPTION

For the NVMe device given, sends the Transcend vendor command and return the bad block of the device.

The <device> parameter is mandatory and may be either the NVMe character device (ex: /dev/nvme0), or a namespace block device (ex: /dev/nvme0n1).

On success, the returned value would print the amount of bad blocks.

### OPTIONS

none

### EXAMPLES

? Print the Transcend device's bad blocks in a human readable format:

```
# nvme transcend badblock /dev/nvme0
```

Part of the nvme-user suite

NVMe

06/23/2023

NVME-TRANSCEND-BAD(1)