



Rocky Enterprise Linux 9.2 Manual Pages on command 'nvme-wdc-vs-drive-info.1'

\$ man nvme-wdc-vs-drive-info.1

NVME-WDC-VS-DRIVE(1) NVMe Manual NVME-WDC-VS-DRIVE(1)

NAME

nvme-wdc-vs-drive-info - Send the NVMe WDC vs-drive-info command,
return result

SYNOPSIS

nvme wdc vs-drive-info <device>

DESCRIPTION

For the NVMe device given, send the unique WDC vs-drive-info command
and provide the additional drive information.

The <device> parameter is mandatory and must be the NVMe character
device (ex: /dev/nvme0).

This will only work on WDC devices supporting this feature. Results for
any other device are undefined.

On success it returns 0, error code otherwise.

OUTPUT EXPLANATION

There are several different fields returned from this command depending
on the drive:

Drive HW Revision

FTL Unit Size
Customer Serial Number
HyperScale Boot Version
TCG Device Ownership

EXAMPLE

```
# nvme wdc vs-drive-info /dev/nvme0
```

NVME

Part of the nvme-user suite.

NVMe	06/23/2023	NVME-WDC-VS-DRIVE(1)
------	------------	----------------------